


A7s Plus

Receiving Card

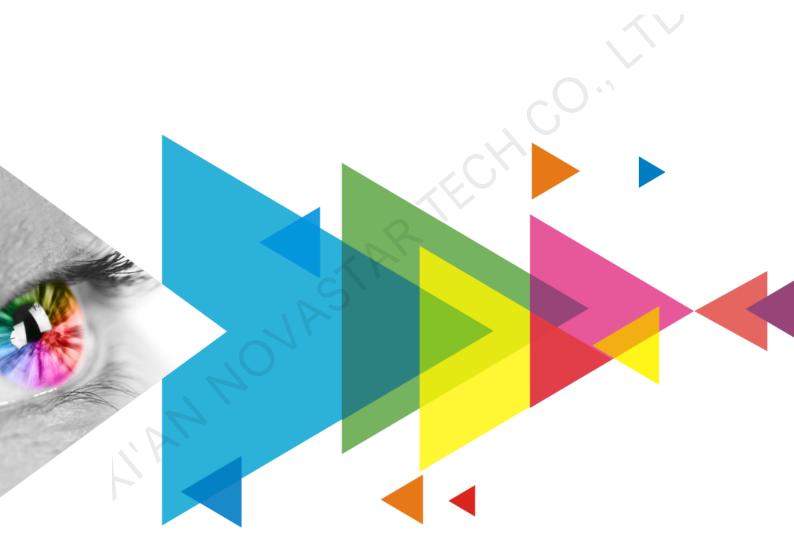

Specifications

Change History

Document Version	Release Date	Description
V1.1.5	2022-03-26	Added the dimensions diagram description.
		Updated the pins section.
V1.1.4	2021-11-26	Deleted the descriptions related to dual backup of calibration coefficients.
		Updated the certification related description.
V1.1.3	2021-08-18	Updated the side-view dimensions diagram.
V1.1.2	2021-07-30	Updated the description of features.
		Added the certification related description.
V1.1.1	2021-02-06	Updated the packing information.
V1.1.0	2020-12-07	Updated the appearance diagram.
		Added the feature of dual backup of calibration coefficients.

Introduction

The A7s Plus is a general small receiving card developed by NovaStar. A single A7s Plus supports resolutions up to 512x512@60Hz (NovaLCT V5.3.1 or later required). Supporting color management, 18bit+, pixel level brightness and chroma calibration, individual gamma adjustment for RGB, and 3D functions, the A7s Plus can significantly improve the display effect and user experience.

The A7s Plus uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A7s Plus has improved electromagnetic compatibility and is suitable for various on-site setups.

Certifications

RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

www.novastar.tech

Features

Improvements to Display Effect

- Color management
 Allow users to freely switch the color gamut of the screen between different gamuts in real time to enable more precise colors on the screen.
- 18bit+ Improve the LED display grayscale by 4 times to avoid grayscale loss due to low brightness and allow for a smoother image.
- Pixel level brightness and chroma calibration
 Work with NovaStar's high-precision calibration
 system to calibrate the brightness and chroma of
 each pixel, effectively removing brightness
 differences and chroma differences, and
 enabling high brightness consistency and
 chroma consistency.
- Quick adjustment of dark or bright lines
 The dark or bright lines caused by splicing of
 cabinets or modules can be adjusted to improve
 the visual experience. This function is easy to
 use and the adjustment takes effect immediately.

 In NovaLCT V5.2.0 or later, the adjustment can
 be performed without using or changing the
 video source.
- 3D function
 Working with the sending card that supports 3D
 function, the receiving card supports 3D image
 output.
- Individual gamma adjustment for RGB
 Working with NovaLCT (V5.2.0 or later) and the
 sending card that supports this function, the
 receiving card supports individual adjustment of
 red gamma, green gamma and blue gamma,
 which can effectively control image nonuniformity at low grayscale conditions and white
 balance offset, allowing for a more realistic
 image.
- Image rotation in 90° increments
 The display image can be set to rotate in multiples of 90° (0°/90°/180°/270°).

Improvements to Maintainability

Smart module (dedicated firmware required)
 Working with the smart module, the receiving
 card supports module ID management, storage
 of calibration coefficients and module
 parameters, monitoring of module temperature,
 voltage and flat cable communication status,
 LED error detection, and recording of the
 module run time.

- Automatic module calibration
 After a new module with flash memory is
 installed to replace the old one, the calibration
 coefficients stored in the flash memory can be
 automatically uploaded to the receiving card
 when it is powered on.
- Quick uploading of calibration coefficients
 The calibration coefficients can be quickly uploaded to the receiving card, improving efficiency greatly.
- Module Flash management
 For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients in module Flash
 For modules with flash memory, when the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to upload the calibration coefficients in the flash memory of the module to the receiving card.
- Mapping function
 The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.
- Setting of a pre-stored image in receiving card
 The image displayed during startup, or displayed
 when the Ethernet cable is disconnected or
 there is no video signal can be customized.
- Temperature and voltage monitoring
 The temperature and voltage of the receiving
 card can be monitored without using peripherals.
- Cabinet LCD
 The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error detection
 The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.

 NovaLCT V5.2.0 or later is required.
- Status detection of dual power supplies
 When two power supplies are used, their
 working status can be detected by the receiving
 card.
- Firmware program readback
 The firmware program of the receiving card can be read back and saved to the local computer.

- NovaLCT V5.2.0 or later is required.
- Configuration parameter readback
 The configuration parameters of the receiving card can be read back and saved to the local computer.
- LVDS transmission (dedicated firmware required)
 Low-voltage differential signaling (LVDS)
 transmission is used to reduce the number of
 data cables from the hub board to module,
 increase the transmission distance, and improve
 the signal transmission quality and
 electromagnetic compatibility (EMC).


Improvements to Reliability

Dual card backup and status monitoring
In an application with requirements for high
reliability, two receiving cards can be mounted
onto a single hub board for backup. When the
primary receiving card fails, the backup card can
serve immediately to ensure uninterrupted
operation of the display.

The working status of the primary and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

- Loop backup
 The receiving car
 - The receiving cards and the sending card form a loop via the primary and backup line connections. When a fault occurs at a location of the lines, the screen can still display the image normally.
- Dual backup of configuration parameters
 The receiving card configuration parameters are
 stored in the application area and factory area of
 the receiving card at the same time. Users
 usually use the configuration parameters in the
 application area. If necessary, users can restore
 the configuration parameters in the factory area
 to the application area.
- Dual program backup
 Two copies of firmware program are stored in
 the application area of the receiving card at the
 factory to avoid the problem that the receiving
 card may get stuck abnormally during program
 update.

Appearance

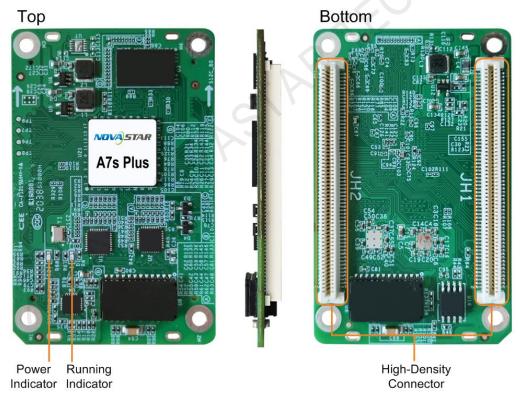

All product pictures shown in this document are for illustration purpose only. Actual product may vary.


Indicators

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.

Indicator	Color	Status	Description		
		Flashing once every 3s	Ethernet cable connection is abnormal.		
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.		
	Flashing once every 0.2s		The receiving card failed to load the program in the application area and is now using the backup program.		
		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.		
Power indicator	Red	Always on	The power input is normal.		

Dimensions

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.5 mm. Ground connection (GND) is enabled for mounting holes.

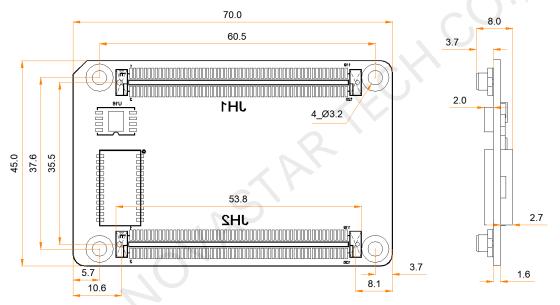

Note

The distance between outer surfaces of the A7s Plus and hub boards after their high-density connectors fit together is 5.0 mm. A 5-mm copper pillar is recommended.

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

PAGE


Tolerance: ±0.3

Unit: mm

Pins

32 Groups of Parallel RGB Data



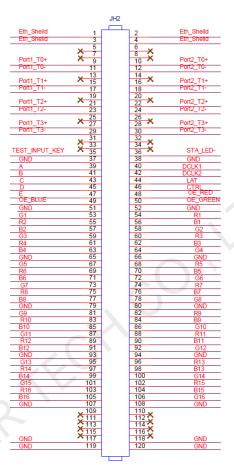

	JH1							
	GND	1	2	GND				
LCD CS signal EXT_CS#RW		3	4	NC				
LCD RS signal	EXT_LCD_CD/RS	5	6	NC				
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC				
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC				
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC				
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC				
LCD control button	EXT_KEY	15	16	NC				
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC				
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC				
	GND	21	22	NC				
	NC	23	24	NC				
	GND	25	26	GND				
/	G17	27	28	R17	1			
/	R18	29	30	B17	/			
/	B18	31	32	G18	1			
/	G19	33	34	R19	1			
/	R20	35	36	B19	/			
/	B20	37	38	G20	1			
	GND	39	40	GND				
/	G21	41	42	R21	/			
/	R22	43	44	B21	/			

PAGE 5

JH1							
/	B22	45	46	G22	/		
/	G23	47	48	R23	/		
/	R24	49	50	B23	/		
/	B24	51	52	G24	/		
	GND	53	54	GND			
/	G25	55	56	R25	/		
/	R26	57	58	B25	/		
/	B26	59	60	G26	/		
/	G27	61	62	R27	/		
/	R28	63	64	B27	/		
/	B28	65	66	G28	/		
	GND	67	68	GND			
/	G29	69	70	R29	/		
/	R30	71	72	B29			
/	B30	73	74	G30	1		
/	G31	75	76	R31	1		
/	R32	77	78	B31	/		
/	B32	79	80	G32	/		
	GND	81	82	GND			
/	RFU4	83	84	RFU3	/		
/	RFU6	85	86	RFU5	/		
/	RFU8	87	88	RFU7	/		
/	RFU10	89	90	RFU9	/		
/	RFU12	91	92	RFU11	/		
/	RFU14	93	94	RFU13	/		
	GND	95	96	GND			
/	RFU16	97	98	RFU15	/		
	NC	99	100	RFU17	/		
	NC	101	102	NC			
	NC	103	104	NC			
	NC	105	106	NC			
	NC	107	108	NC			
	GND	109	110	GND			
	GND	111	112	GND			
	NC	113	114	NC			
	EXT_5V	115	116	EXT_5V			
	EXT_5V	117	118	EXT_5V			
	EXT_5V	119	120	EXT_5V			


	JH2						
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground		
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground		
	NC	5	6	NC			
	NC	7	8	NC			
	Port1_T0+	9	10	Port2_T0+			
	Port1_T0-	11	12	Port2_T0-			
	NC	13	14	NC			
	Port1_T1+	15	16	Port2_T1+			
Gigabit Ethernet port	Port1_T1-	17	18	Port2_T1-	Gigabit Ethernet port		
	NC	19	20	NC			
	Port1_T2+	21	22	Port2_T2+			
	Port1_T2-	23	24	Port2_T2-			
	NC	25	26	NC			


www.novastar.tech PAGE 6

JH2					
	Port1_T3+	27	28	Port2_T3+	
	Port1_T3-	29	30	Port2_T3-	
	NC	31	32	NC	
	NC	33	34	NC	
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)
	GND	37	38	GND	·
Line decoding signal	A	39	40	DCLK1	Shift clock output 1
Line decoding signal	В	41	42	DCLK2	Shift clock output 2
Line decoding signal	С	43	44	LAT	Latch signal output
Line decoding signal	D	45	46	CTRL	Afterglow control signal
Line decoding signal	Е	47	48	OE_RED	Display enable signal
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal
	GND	51	52	GND	
/	G1	53	54	R1	1
/	R2	55	56	B1	/
/	B2	57	58	G2	1
/	G3	59	60	R3	1
/	R4	61	62	B3	1
/	B4	63	64	G4	1
,	GND	65	66	GND	,
/	G5	67	68	R5	/
/	R6	69	70	B5	/
/	B6	71	72	G6	/
1	G7	73	74	R7	/
1	R8	75	76	B7	1
1	B8	77	78	G8	1
1	GND	79	80	GND	1
	G9	81	82	R9	1
1	R10	83	84	B9	/
1					/
1	B10	85	86	G10	/
1	G11	87	88	R11	/
1	R12	89	90	B11	/
1	B12	91	92	G12	/
	GND	93	94	GND	,
1	G13	95	96	R13	/
1	R14	97	98	B13	/
	B14	99	100	G14	/
1	G15	101	102	R15	/
1	R16	103	104	B15	/
/	B16	105	106	G16	/
F	GND	107	108	GND	
	NC	109	110	NC	
	NC	111	112	NC	
	NC	113	114	NC	
	NC	115	116	NC	
	GND	117	118	GND	
	GND	119	120	GND	

www.novastar.tech PAGE 7

64 Groups of Serial Data

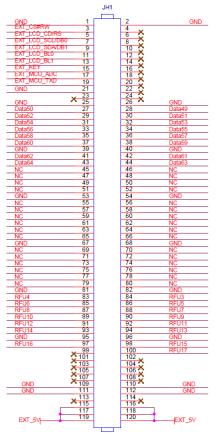

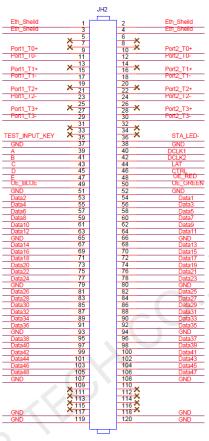

JH1							
	GND	1	2	GND			
LCD CS signal EXT_CS#RW		3	4	NC			
LCD RS signal	EXT_LCD_CD/RS	5	6	NC			
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC			
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC			
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC			
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC			
LCD control button	EXT_KEY	15	16	NC			
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC			
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC			
	GND	21	22	NC			
	NC	23	24	NC			
	GND	25	26	GND			
/	Data50	27	28	Data49	/		
/	Data52	29	30	Data51	/		
/	Data54	31	32	Data53	/		
/	Data56	33	34	Data55	/		
/	Data58	35	36	Data57	/		
/	Data60	37	38	Data59	/		
	GND	39	40	GND			
/	Data62	41	42	Data61	/		
/	Data64	43	44	Data63	/		
	NC	45	46	NC			
	NC	47	48	NC			
	NC	49	50	NC			

PAGE 8

JH1						
	NC	51	52	NC		
	GND	53	54	GND		
	NC	55	56	NC		
	NC	57	58	NC		
	NC	59	60	NC		
	NC	61	62	NC		
	NC	63	64	NC		
	NC	65	66	NC		
	GND	67	68	GND		
	NC	69	70	NC		
	NC	71	72	NC		
	NC	73	74	NC		
	NC	75	76	NC		
	NC	77	78	NC		
	NC	79	80	NC		
	GND	81	82	GND		
/	RFU4	83	84	RFU3	1	
/	RFU6	85	86	RFU5	1	
/	RFU8	87	88	RFU7	1	
/	RFU10	89	90	RFU9	/	
/	RFU12	91	92	RFU11	/	
/	RFU14	93	94	RFU13	1	
	GND	95	96	GND		
/	RFU16	97	98	RFU15	1	
	NC	99	100	RFU17	1	
	NC	101	102	NC		
	NC	103	104	NC		
	NC	105	106	NC		
	NC	107	108	NC		
	GND	109	110	GND		
	GND	111	112	GND		
	NC	113	114	NC		
	EXT_5V	115	116	EXT_5V		
	EXT_5V	117	118	EXT_5V		
	EXT_5V	119	120	EXT_5V		

	JH2								
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground				
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground				
	NC	5	6	NC					
	NC	7	8	NC					
	Port1_T0+	9	10	Port2_T0+					
	Port1_T0-	11	12	Port2_T0-					
	NC	13	14	NC					
	Port1_T1+	15	16	Port2_T1+					
	Port1_T1-	17	18	Port2_T1-					
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port				
	Port1_T2+	21	22	Port2_T2+					
	Port1_T2-	23	24	Port2_T2-					
	NC	25	26	NC					
	Port1_T3+	27	28	Port2_T3+					
	Port1_T3-	29	30	Port2_T3-					
	NC	31	32	NC					
	NC	33	34	NC					
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)				
	GND	37	38	GND					

www.novastar.tech PAGE

Line decoding signal A 39 40 DCLK1 Shift clock output 1	JH2						
Line decoding signal B	Line decoding signal	А	39		DCLK1	Shift clock output 1	
Line decoding signal		В	41	42	DCLK2	Shift clock output 2	
Line decoding signal		С	43	44			
Line decoding signal Display enable signal OE_BLUE 49 50 OE_GREEN Display enable signal OE_BLUE 49 50 OE_GREEN Display enable signal OE_BLUE 49 50 OE_GREEN Display enable signal OE_BLUE 53 54 Data1 / / Data2 53 54 Data1 / / Data4 55 56 Data3 / / Data6 57 58 Data5 / / Data6 57 58 Data5 / / Data10 61 62 Data9 / / / Data10 61 62 Data9 / / / Data12 63 64 Data11 / / OATA1 / OATA14 67 68 DATA13 / / OATA14 67 68 DATA13 / / / DATA14 67 68 DATA13 / / / DATA16 69 70 DATA15 / / DATA16 69 70 DATA17 / / / DATA20 73 74 DATA19 / / / / / / / / /		D	45	46	CTRL		
Display enable signal OE BLUE 49 50 OE GREEN Display enable signal GND 51 52 GND		Е	47	48	OE RED		
GND		OE_BLUE	49	50	OE_GREEN		
/ Data4 55 56 Data3 / / Data6 57 58 Data5 / / Data8 59 60 Data7 / / Data10 61 62 Data9 / / Data12 63 64 Data11 / / Data14 67 68 Data11 / / Data14 67 68 Data13 / / Data16 69 70 Data15 / / Data18 71 72 Data17 / / Data20 73 74 Data17 / / Data22 75 76 Data21 / / Data224 77 78 Data23 / / Data24 77 78 Data23 / / Data26 81 82 Data27 / /			51	52			
/ Data6 57 58 Data5 / / Data8 59 60 Data7 / / Data10 61 62 Data9 / / Data12 63 64 Data11 / / Data12 63 64 Data11 / / Data14 67 68 Data13 / / Data14 67 68 Data13 / / Data16 69 70 Data15 / / Data18 71 72 Data17 / / Data20 73 74 Data19 / / Data22 75 76 Data21 / / Data22 75 76 Data22 / / Data26 81 82 Data23 / / Data28 83 84 Data27 / <t< td=""><td>/</td><td>Data2</td><td>53</td><td>54</td><td>Data1</td><td>/</td></t<>	/	Data2	53	54	Data1	/	
/ Data8 59 60 Data7 / / Data10 61 62 Data9 / / Data12 63 64 Data11 / GND 65 66 GND GND / Data14 67 68 Data13 / / Data16 69 70 Data15 / / Data18 71 72 Data17 / / Data20 73 74 Data19 / / Data20 73 74 Data19 / / Data22 75 76 Data21 / / Data24 77 78 Data23 / GND 79 80 GND GND / Data26 81 82 Data25 / / Data30 85 86 Data29 / / Data31 <td< td=""><td>/</td><td>Data4</td><td>55</td><td>56</td><td>Data3</td><td>/</td></td<>	/	Data4	55	56	Data3	/	
/ Data10 61 62 Data9 / / Data12 63 64 Data11 / GND 65 66 GND / Data14 67 68 Data13 / / Data16 69 70 Data15 / / Data18 71 72 Data17 / / Data22 75 76 Data219 / / Data22 75 76 Data21 / / Data24 77 78 Data23 / GND 79 80 GND GND / Data226 81 82 Data25 / / Data28 83 84 Data27 / / Data30 85 86 Data29 / / Data32 87 88 Data33 / / Data36 91	/	Data6	57	58	Data5	/	
Data12	/	Data8	59	60	Data7	/	
GND	/	Data10	61	62	Data9	/	
/ Data14 67 68 Data13 / / Data16 69 70 Data15 / / Data18 71 72 Data17 / / Data20 73 74 Data19 / / Data22 75 76 Data21 / / Data24 77 78 Data23 / / Data24 77 78 Data23 / GND 79 80 GND GN	/	Data12	63	64	Data11	/	
/ Data16 69 70 Data15 / / Data18 71 72 Data17 / / Data20 73 74 Data19 / / Data22 75 76 Data21 / / Data24 77 78 Data23 / GND 79 80 GND / Data26 81 82 Data25 / / Data28 83 84 Data27 / / Data30 85 86 Data29 / / Data32 87 88 Data31 / / Data34 89 90 Data33 / / Data36 91 92 Data35 / / Data36 91 92 Data35 / / Data38 95 96 Data37 / / Data40		GND	65	66	GND		
/ Data18 71 72 Data17 / / Data20 73 74 Data19 / / Data22 75 76 Data21 / / Data24 77 78 Data23 / GND 79 80 GND GND / Data26 81 82 Data25 / / Data28 83 84 Data27 / / Data30 85 86 Data29 / / Data30 85 86 Data29 / / Data32 87 88 Data31 / / Data34 89 90 Data33 / / Data36 91 92 Data35 / GND 93 94 GND GND / Data38 95 96 Data37 / / Data40	/	Data14	67	68	Data13	/	
Data20	/	Data16	69	70	Data15	/	
/ Data22 75 76 Data21 / Data24 77 78 Data23 / GND 79 80 GND / Data26 81 82 Data25 / Data28 83 84 Data27 / Data30 85 86 Data29 / / Data32 87 88 Data31 / / Data34 89 90 Data33 / Data36 91 92 Data35 / GND 93 94 GND / Data38 95 96 Data37 / Data40 97 98 Data39 / / Data42 99 100 Data41 / Data44 101 102 Data43 / Data48 105 106 Data47 / GND NC 109 110 NC NC 111 112 NC NC 1115 116 NC GND NC GND NC 115 116 NC	/	Data18	71	72	Data17	/	
Data24	/	Data20	73	74	Data19	1	
GND	/	Data22	75	76	Data21	/	
/ Data26 81 82 Data25 / / Data28 83 84 Data27 / / Data30 85 86 Data29 / / Data32 87 88 Data31 / / Data34 89 90 Data33 / / Data36 91 92 Data35 / / GND 93 94 GND / Data38 95 96 Data37 / / Data40 97 98 Data37 / / Data42 99 100 Data41 / / Data42 99 100 Data43 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / RO	/	Data24	77	78	Data23	/	
/ Data28 83 84 Data27 / / Data30 85 86 Data29 / / Data32 87 88 Data31 / / Data34 89 90 Data33 / / Data36 91 92 Data35 / GND 93 94 GND / Data38 95 96 Data37 / / Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC ROD 117 118 GND </td <td></td> <td>GND</td> <td>79</td> <td>80</td> <td>GND</td> <td></td>		GND	79	80	GND		
/ Data30 85 86 Data29 / / Data32 87 88 Data31 / / Data34 89 90 Data33 / / Data36 91 92 Data35 / / Data38 95 96 Data37 / / Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data42 99 100 Data43 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / RO NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC	/	Data26	81	82	Data25	1	
/ Data32 87 88 Data31 / / Data34 89 90 Data33 / / Data36 91 92 Data35 / GND 93 94 GND / Data38 95 96 Data37 / / Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND 107 108 GND NC 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data28	83	84	Data27	/	
/ Data34 89 90 Data33 / / Data36 91 92 Data35 / GND 93 94 GND / Data38 95 96 Data37 / / Data40 97 98 Data39 / / Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data30	85	86	Data29	/	
/ Data36 91 92 Data35 / GND 93 94 GND / / Data38 95 96 Data37 / / Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND 107 108 GND NC 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data32	87	88	Data31	/	
GND 93 94 GND	/	Data34	89	90	Data33	/	
/ Data38 95 96 Data37 / / Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND 107 108 GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data36	91	92	Data35	/	
/ Data40 97 98 Data39 / / Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND 107 108 GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND		GND	93	94	GND		
/ Data42 99 100 Data41 / / Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND 107 108 GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data38	95	96	Data37	/	
/ Data44 101 102 Data43 / / Data46 103 104 Data45 / / Data48 105 106 Data47 / GND 107 108 GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data40	97	98	Data39	/	
/ Data46 103 104 Data45 / Data48 105 106 Data47 / GND 107 108 GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data42	99	100	Data41	/	
/ Data48 105 106 Data47 / GND 107 108 GND NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data44	101	102	Data43	/	
GND 107 108 GND NC 109 110 NC NC NC 111 112 NC NC NC 113 114 NC NC NC 115 116 NC GND 117 118 GND GND GND CONTROL GND CON	/	Data46		104	Data45	/	
NC 109 110 NC NC 111 112 NC NC 113 114 NC NC 115 116 NC GND 117 118 GND	/	Data48	105	106	Data47	/	
NC 111 112 NC NC NC 113 114 NC NC 115 116 NC GND 117 118 GND			107	108			
NC 113 114 NC NC NC 115 116 NC GND 117 118 GND				110			
NC 115 116 NC GND 117 118 GND			111				
GND 117 118 GND		NC	113	114	NC		
			115				
CND 110 120 CND							
I GIND 119 120 GIND		GND	119	120	GND		



The recommended power input is 5.0 V.

OE_RED, OE_GREEN and OE_BLUE are display enable signals. When RGB are not controlled separately, use OE_RED. When the PWM chip is used, they are used as GCLK signals.

In the mode of 128 groups of serial data, Data65-Data128 are multiplexed into Data1-Data64.

Reference Design for Extended Functions

	Pins for Extended Functions							
Pin	Recommended Module Flash Pin	Recommended Smart Module Pin	Description					
RFU4	HUB_SPI_CLK	Reserved	Clock signal of serial pin					
RFU6	HUB_SPI_CS	Reserved	CS signal of serial pin					
RFU8	HUB_SPI_MOSI	/	Module Flash data storage input					
KFU6	/	HUB_UART_TX	Smart module TX signal					
RFU10	HUB_SPI_MISO	1	Module Flash data storage output					
KFOTO	/	HUB_UART_RX	Smart module RX signal					
RFU3	HUB_	CODE0	Module Flash BUS control pin					
RFU5	HUB_	CODE1	Module Flash 603 control pin					

PAGE 10 www.novastar.tech

Pins for Extended Functions		
RFU7	HUB_CODE2	
RFU9	HUB_CODE3	
RFU11	HUB_H164_CSD	74HC164 data signal
RFU13	HUB_H164_CLK	
RFU14	POWER_STA1	- Dual power supply detection signal
RFU16	POWER_STA2	
RFU15	MS_DATA	Dual card backup connection signal
RFU17	MS_ID	Dual card backup identifier signal



The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

Specifications

Maximum Resolution	512x512@60Hz	
Electrical Parameters	Input voltage	DC 3.3 V to 5.5 V
	Rated current	0.6 A
	Rated power consumption	3.0 W
Operating Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 90% RH, non-condensing
Storage Environment	Temperature	-25°C to +125°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 8.0 mm
	Net weight	17.4 g Note: It is the weight of a single receiving card only.
IRMA	Gross weight	1.2 kg Note: It is the total weight of the products, printed materials and packing materials packed according to the packing specifications.
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 80 receiving cards.
	Packing box dimensions	378.0 mm × 190.0 mm × 120.0 mm

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

www.novastar.tech

Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website
www.novastar.tech
Technical support
support@novastar.tech